

## DC315 ( wall radio emitter ) programing



This emitter doesn't have a programe button (like other emitters on the backside)  
You can programme this emitter by pushing the UP and STOP button on it at the same time.

If the motor is built in the roller shutter on the left side (outside look):

- After the pover cut off (in 10 seconds) push the Programe button twice (2x) and than the DOWN button once (1x).



If the motor is built in the roller shutter on the rigt side (outside look):

- After the pover cut off (in 10 seconds) push the Programe button twice (2x) and than the UP button once (1x).



### iroda:

H-1139 Budapest, Frangepán utca 79.

www.smart-home.hu | info@smart-home.hu | +36 20 287 1714

### számlázási cím:

SANET-Trade Kft. | H-1139 Budapest, Petneházy utca 28.

Adószám: 14996429-2-41 | Bankszámlaszám: 10401000-50515755-88901018 K&H